


Replace Pick Roller 27-656-0225A110 for Plustek PS286 Plus

1. Unscrew 3 screws on the bottom of the scanner.
2. Unscrew 2 screws on the back of the scanner.
3. Gently remove the back cover.
4. Remove the power connector.
5. Remove the plastic locking washer and plastic holder for the pick roller.

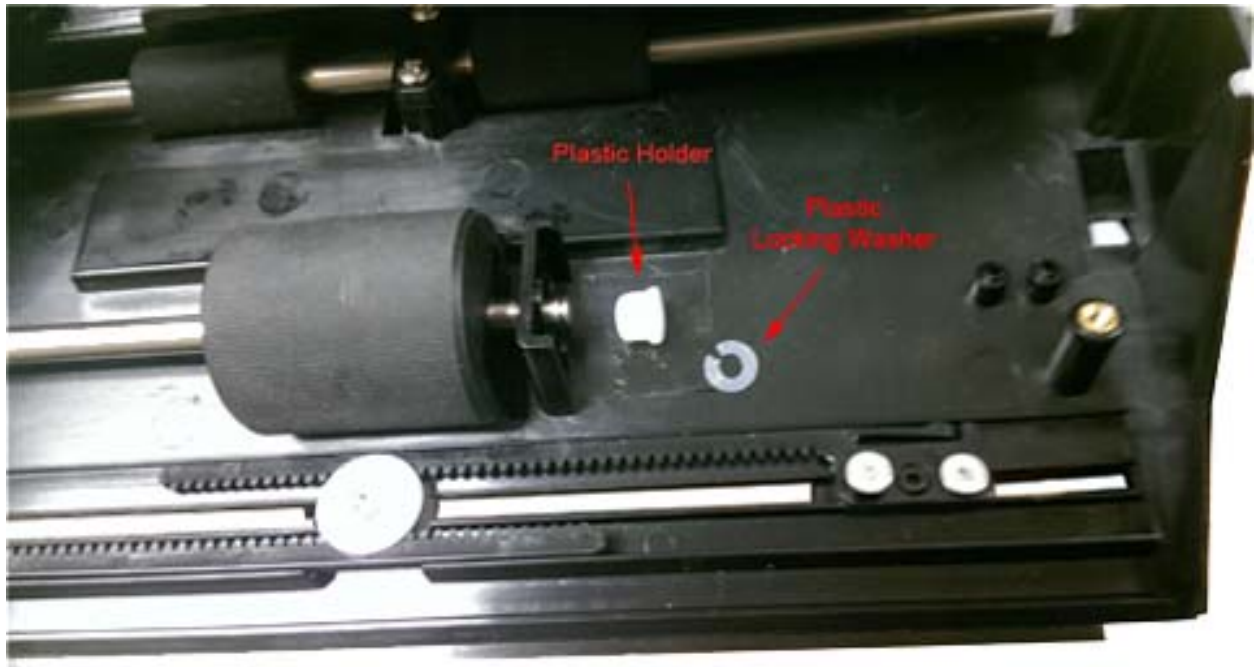

6. Remove the plastic locking washer and metallic holder for the pick roller.



7. Push the roller kit to the right and lift the left end to remove from the scanner.
8. Remove the plastic locking washer.



9. Remove the plastic gear.



