
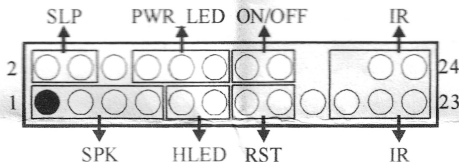


JPANEL1



Pin	Assignment	Function	Pin	Assignment	Function
1	+5V	Speaker Connector	2	Sleep Control	Sleep Button
3	NA		4	Ground	
5	NA		6	NA	POWER LED
7	Speaker		8	Power LED (+)	
9	HDD LED (+)	Hard Drive LED	10	Power LED (+)	
11	HDD LED (-)		12	Power LED (-)	Power-on Button
13	Ground	Reset Button	14	Power Button	
15	Reset Control		16	Ground	
17	NA	IrDA Connector	18	KEY	IrDA Connector
19	NA		20	KEY	
21	+5V		22	Ground	
23	IRTX		24	IRRX	

Power Connectors: JATXPWR1

 JATXPWR1	PIN	Assignment	PIN	Assignment
	1	+3.3V	11	+3.3V
	2	+3.3V	12	-12V
	3	Ground	13	Ground
	4	+5V	14	PS_ON
	5	Ground	15	Ground
	6	+5V	16	Ground
	7	Ground	17	Ground
	8	PW_OK	18	-5V
	9	Standby Voltage +5V	19	+5V
	10	+12V	20	+5V